



Replacing LCD Screen

Tools used in this guide

- [Phillips #0 Screwdriver](#)


Parts relevant to this guide

- [Samsung L600 LCD Display](#)



Step 1 - *disassembly Remove Back Cover*

- Remove the six external screws from the camera using a #0 Phillips screwdriver.
- After removal of screws, the bottom of back external case will automatically loosen from camera.
- Be careful to make sure the screws don't fall on the ground or else they will be difficult to find.

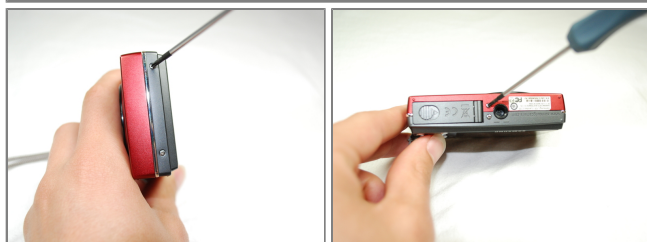




Step 2


- Open battery cover and remove battery.



Step 3


- Slide fingernail or wedge from bottom to top on right side of camera.

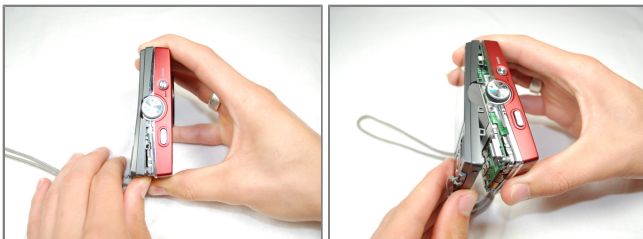

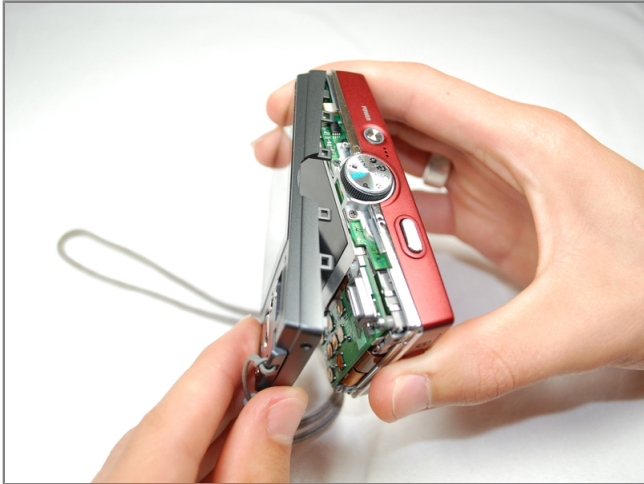

Step 4

- Apply pressure on the top right corner and pull back external over off.
- If it sounds like it is starting to crack, keep pulling. It will come off clean.

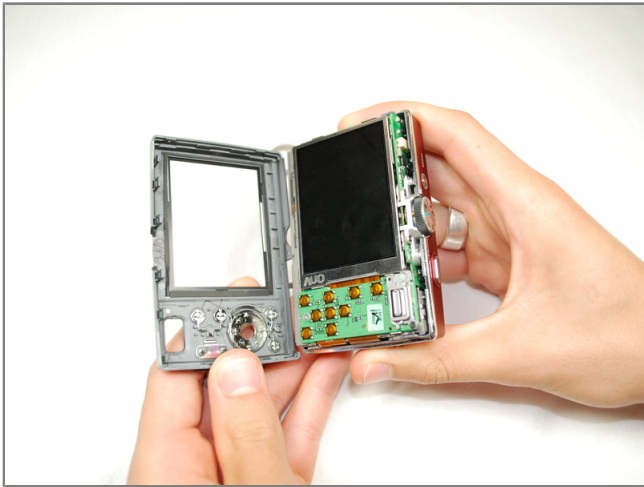

Step 5


- Pull off back cover.
- Some parts behind back cover will fall out.






Step 6 - Replacing LCD Screen


- Remove the screws holding the circuit board.
- Carefully remove the circuit board.

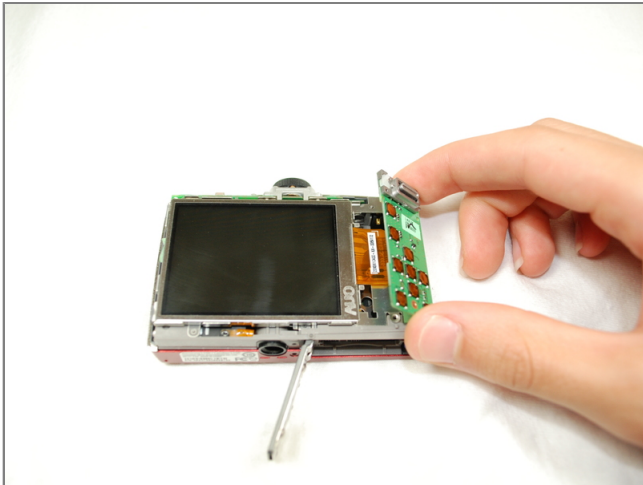

Step 7


- Carefully lift circuit board from camera.
- Circuit board still attached to camera by ribbon.

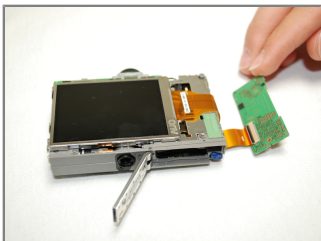

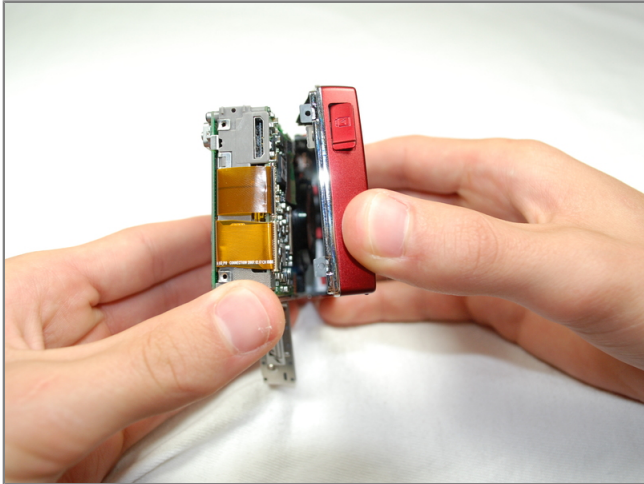


Step 8


- Remove the front cover. It should come off easily.
- Buttons might fall out when you remove the front cover.

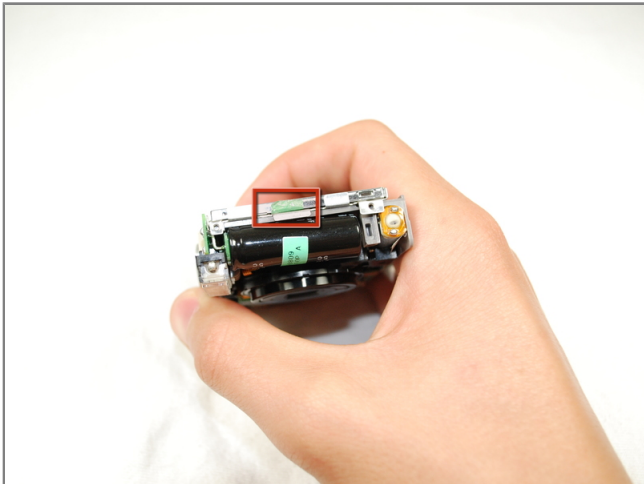

Step 9


- Remove the green tape that holds the LCD screen.
- Carefully lift the LCD Screen.

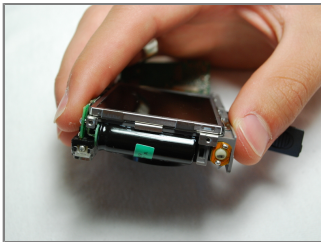

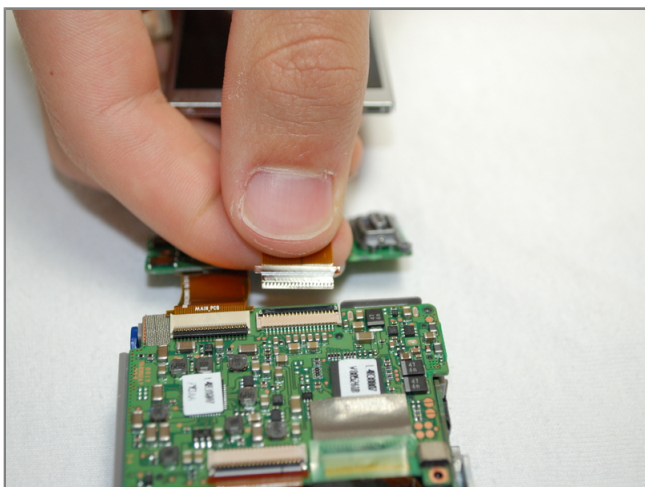

Step 10

- Flip the camera over to the other side.
- Lift the black strip and the ribbon should easily come out.
- The LCD Screen should be completely separated from the camera now.

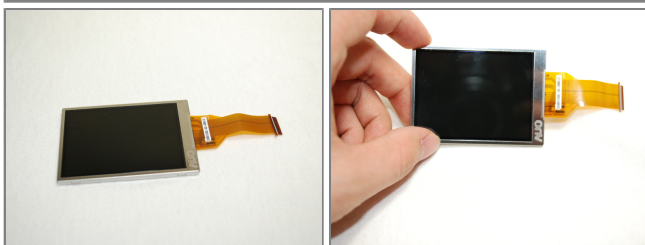

Step 11

- Insert the new LCD Screen by pushing the ribbon into the slot.
- Flip the black strip back down to lock the ribbon in.
- Your new LCD Screen should be connected to the camera now.

